


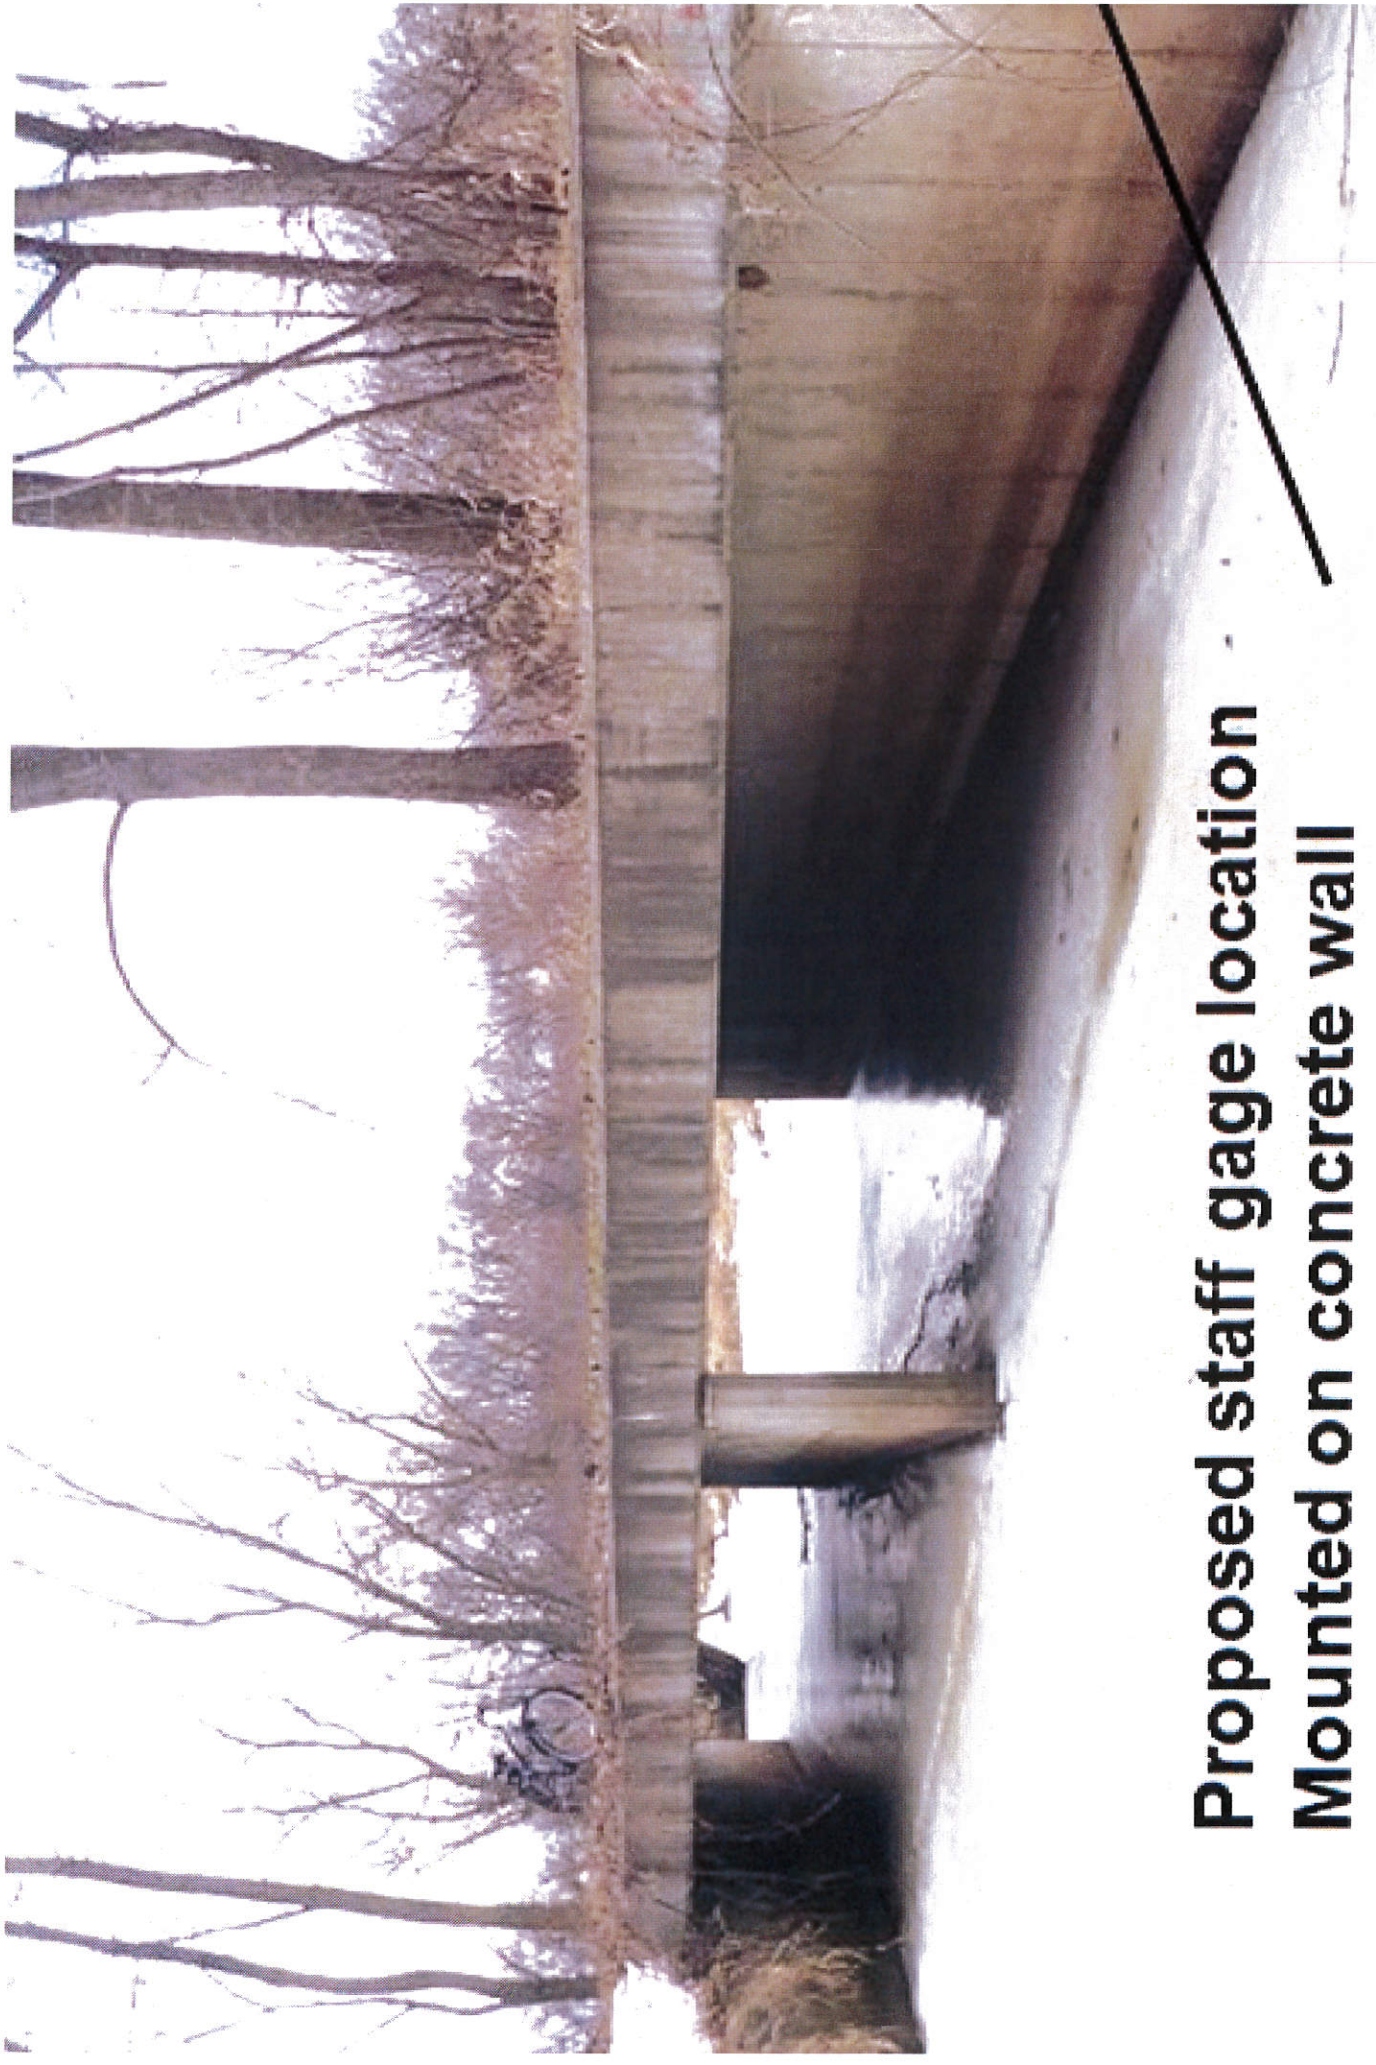

**Proposed staff gage location
Mounted on concrete wall
at the NE corner of box culvert**



Mounting holes
attached to
concrete with
stainless steel
lag screws

10 cm wide
1.5 m long
~0.5 cm thick

90

80

70

60

